

SWITCH BOX + REMOTE CONTROL

INSTRUCTIONS



WARNING:

Ensure that your Matsuko Switch Box is switched off at the mains before you attempt to conduct any type of maintenance.

POSITIONING YOUR SWITCH BOX

The **remote control** will work best if it has a clear line of sight to the **Switch Box**.

Obstructions in the line of sight and other atmospheric conditions can reduce the distance the signal from the **remote control** can travel.

With a clear line of sight to the **Switch Box**, the **remote control** will operate at a distance of 200m (650ft).

USING YOUR REMOTE CONTROL

The **remote control** provides greater flexibility for controlling your **Switch Box** than ever before.

The **Switch Box** can still be operated by the controls on the front of the unit as described in the main instruction booklet, but the **remote control** provides a duplicate set of buttons meaning you do not have to be at the unit to control it.

Pressing the relevant button on the **remote control** will change the state of that output.

For example, if you turn **line 1** on the **Switch Box** manually, pressing **button 1** on the **remote control** will turn it off. Pressing **button 1** again, either on the **remote control** or the **Switch Box**, will turn it back on.

Pressing the **power button** on the **remote control** will turn all lines on or off in sequence.

When a button is pressed on the **remote control**, the **power LED** flashes. The **power light** on the **Switch Box** will also flash, indicating communication and the relevant light for the relevant line will turn on or off.



NOTE:- On first power up (or after an interruption in power) the first press of any button on the **remote control** is used to begin the communication between the **remote control** and the **Switch Box**. The **LED** on the **remote control** and the **power light** on the **Switch Box** will both flash, but nothing else will happen. The next button press will produce the desired result.

CHANGING THE REMOTE CONTROL BATTERY

The power for the remote control is provided by 1 x CR2032 battery. If the effectiveness of the remote control begins to reduce then it may be necessary to change the battery. Follow the procedure below to do this:


1. Turn over the remote control and remove the two screws.



2. When the screws are removed, gently pry off the back cover.



3. When the cover is removed, you will be able to see the battery. Remove the battery from the remote control.

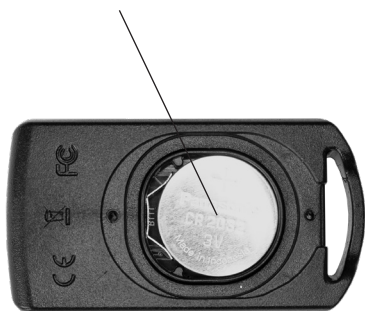

4. Insert the new battery into the remote control making sure the positive side is facing up.

Replace the cover and secure it with the screws.

